



## Features and Benefits

- Robust housing
- Easy setting of set point
- Pocket supplied with immersion types as standard
- Volt Free Contacts
- Concealed adjustment to prevent unauthorized adjustment (not ST-S)
- Manual reset versions have an exposed push button on the front cover so no tools needed to reset

## Technical Overview

The ST-x range of thermostats can be used to control the temperatures of liquids and gases in a variety of applications. The liquid filled sensing elements ensure rapid response and accurate switching differentials. They are available in two formats;

Control thermostats (auto reset), with an adjustable set point, adjustable differential and auto rest, which provides a switched output to a heater, or controller.

Product Codes				Specification	
Capillary <b>ST-C-01M</b>	Type Manual reset	Range 50 to 140°C	Diff.	Control range	See product codes for ranges
				Switch rating	24 to 240Vac @16(4)A
				Sensing element	Liquid filled copper element
Duct <b>ST-D-01A</b>	Auto reset	-35 to +35°C	3°C	Housing:	
<b>ST-D-02A</b>	Auto reset	0 to 90°C	2°C	Material	ABS UL94 VO (flame retardant)
<b>ST-D-03A</b>	Auto reset	-30 to +30°C	3°C	Dimensions	108 x 70 x 72mm
<b>ST-D-04M</b>	Manual reset	0 to 90°C		ST-S-02A	105 x 38 x 42mm
Immersion <b>ST-I-01A</b>	Auto reset	0 to 120°C	2 to 12°C	Capillary (ST-C):	
<b>ST-I-02M</b>	Manual reset	0 to 110°C		Bulb	67mm x 6.5mm dia.
<b>ST-I-03M</b>	Manual reset	20 to 90°C		Capillary	1.5m
Wall <b>ST-W-01A</b>	Auto reset	-30 to +30°C	3°C	Duct probe (ST-D)	280mm x 16mm dia.
Strap-on <b>ST-S-02A</b>	Auto reset	0 to 90°C	4°C	Immersion pocket (ST-I):	
				Material	Stainless steel 316
				Dimensions	130mm x ½" BSPT
				Pressure rating	10 bar
				Strap length (ST-S)	250mm
				Ambient:	
				RH	0 to 95% RH, non-condensing
				Temperature	-35 to 65°C
				Protection:	
				ST-D-01A	IP54
				ST-S-02A	IP40
				Other auto reset	IP65
				Manual reset	P43
Accessory <b>ST-IMM-PKT</b>				Weights:	
Optional stainless steel pocket (ST-I range <u>only</u> )				ST-C	340g
				ST-D	700g
				ST-I	580g
				ST-W	480g
				ST-S	250g
				Country of origin	China
				Conformity	LVD, CE & UKCA Marked

### WEEE Directive:



At the end of the products useful life please dispose as per the local regulations. Do not dispose of with normal household waste. Do not burn.



## Installation

Common installation;

1. The ST-x range should only be installed by a competent, suitably trained technician, experienced in installation with hazardous voltages. (>50Vac & <1000Vac or >75Vdc & 1500Vdc)
2. Ensure that all power is disconnected before carrying out any work.
3. If the sensor is to be mounted outside (IP65 housing options only), it is recommended that the unit be mounted with the cable entry at the bottom. If the cable is fed from above then into the cable gland at the bottom, it is recommended that a rain loop be placed in the cable before entry into the sensor.
4. Chose a suitable for place to install the thermostat.

### ST-C

Fix the capillary in position, sensing is only done at the bulb end not along the capillary length.

### ST-D

When mounting in the duct ensure that it will give a representative sample of the prevailing air condition.

Mount to the supplied support to the duct and fix using suitable screws. Slide the capillary into the support and tighten the grub screw to secure the housing.

### ST-I

Fit a 1/2" BSPT female threaded boss in a suitable location in the pipe.

Screw the pocket into the boss using a thread-seal compound, and slid the capillary into the pocket and tighten the grub screw to secure the housing.

### ST-S

Mount the stat onto the pipe or surface to be monitored using the strap supplied, ensuring that there is sufficient room to adjust the controls. Ambient temperature around the sensor can affect the switching point.

Common installation;

5. Remove the front cover by removing the two screws, and separate from the main body.
6. Feed the cable through the waterproof gland and terminate the cores at the terminal block as required. Leaving some slack inside the unit, tighten the cable gland onto the cable to ensure water tightness.
7. Adjust the set point scale as required and replace the front cover.

## Connections

Auto reset versions;

- |   |                 |
|---|-----------------|
| 3 | Normally closed |
| 2 | Normally open   |
| 1 | Common          |

Manual reset versions;

- |   |                 |
|---|-----------------|
| 2 | Normally closed |
| 1 | normally open   |
| C | Common          |

ST-S-02A;

- |   |                 |
|---|-----------------|
| 2 | Normally open   |
| 1 | Normally closed |
| C | Common          |

Auto Reset Version

1 makes to 3 if the actual temperature is below the thermostat setting

1 makes to 2 if the actual temperature is above the thermostat setting

**Tolerance of Set Point**

Part code	Set position	Tolerance (±)
ST-C-01M	60°C	-
	120°C	+5°C -10°C
ST-D-01A	-20°C	8
	20°C	5
ST-D-02A	25°C	5
	70°C	8
ST-D-03A	-20°C	8
	20°C	5
ST-D-04M	70°C	+5°C -10°C

Part code	Set position	Tolerance (±)
ST-I-01A	20°C	5
	90°C	10
ST-I-02M	90°C	+5°C -10°C
ST-I-03M	70°C	+5°C -10°C
ST-W-01A	-20°C	8
	20°C	5
ST-S-02A	55°C	5
	20°C	10

Whilst every effort has been made to ensure the accuracy of this specification, Sontay cannot accept responsibility for damage, injury, loss or expense from errors or omissions. In the interest of technical improvement, this specification may be altered without notice.